


# Rim Owners Manual

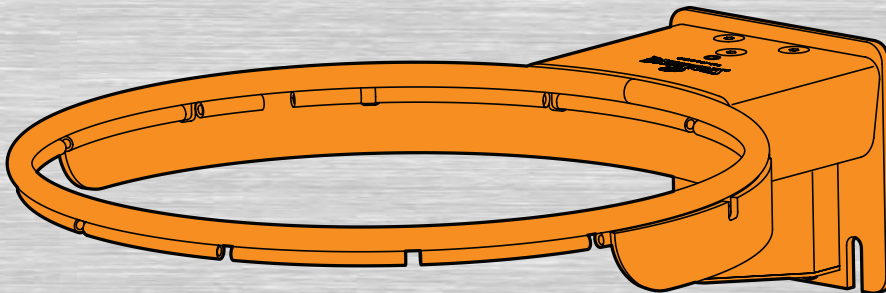

**Model Number:**



 
## **WARNING!**

READ AND UNDERSTAND  
OPERATOR'S MANUAL  
BEFORE USING THIS UNIT.

FAILURE TO FOLLOW  
OPERATING INSTRUCTIONS  
COULD RESULT IN INJURY  
OR DAMAGE TO PROPERTY.

**Customer Service Center**  
• 200 American Avenue • Jefferson, IA 50129  
1-800-435-3895 • [www.spaldingequipment.com](http://www.spaldingequipment.com)

## REQUIRED TOOLS AND MATERIALS:

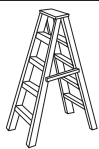


- (2) Stepladders 8 ft. (2.4 m)




- (1) Allen Wrench (1/4")



 - (1) Allen Wrench (5/16")

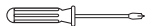

 - (1) Phillips Screwdriver

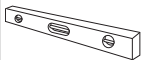

- (1) Carpenter's Level





9/16"





9/16"

- (2 each) 9/16" Wrenches and/or Socket Wrenches and Sockets (Deep-Well Sockets are Recommended).

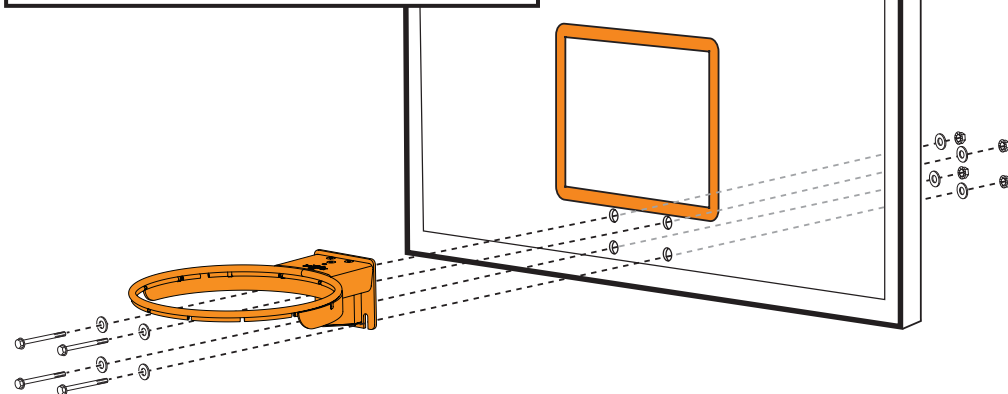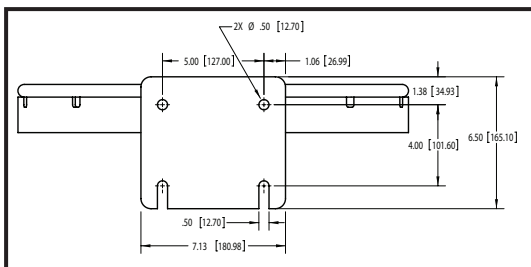


## TO ADJUST TENSION

Remove the rim cover from the rim and make adjustments as shown.

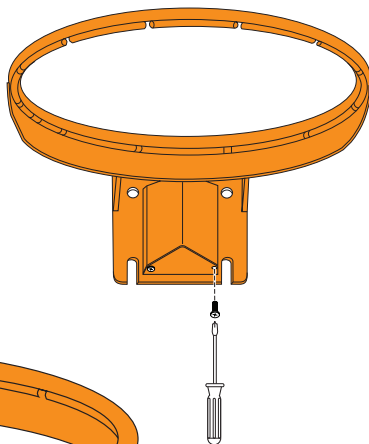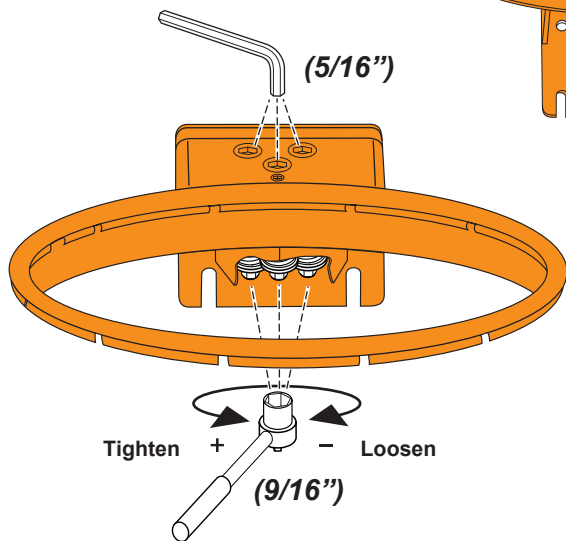

## TO LEVEL RIM

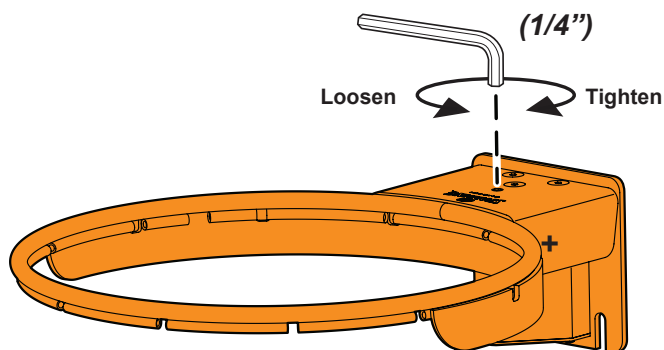

## INSTALL NET

- Remove nylon net-holder from the rim.
- Reinstall while inserting all net loops into slots along ring.
- Position spring lock between ring slots at the position indicated.
- The cable protruding from the spring lock inserts into the tube and the metal end rests against the tube.

